Instruction of UR01

Parameters:

1. Memorize 500 remote controls (the 501th one will replace the first one)
2. Work voltage: DC 12-24V or AC 8V-16V
3. Work current: Max. 50mA
4. Work frequency: 433.92MHz
5. Coding instruction:
   1. Press the Key button till the corresponding blue light will be brighter.
   2. Press one button of the transmitter 2-3 times until the corresponding blue light becomes dark.
   3. press the same button again until the corresponding blue light flashes 3-5 times, this means you have finished the coding.

   Follow the same way to code other remote controls.

   NO.1 Blue light for K1 channel, NO.2 Blue light for K2 channel. (The same as K3, K4)
6. Instruction of deleting coding : Press the Key button till all blue lights start flash, then release the Key button. When the flash light stop to flash and be dark, It means all the coding have been deleted.

The connecting instruction is as below:

The four relays are separately connected to the first,second,third and forth button of the remote control.

For example: K1's 2 points need to be connected to PB and GND of opener 1. (The same as K2, K3, K4)
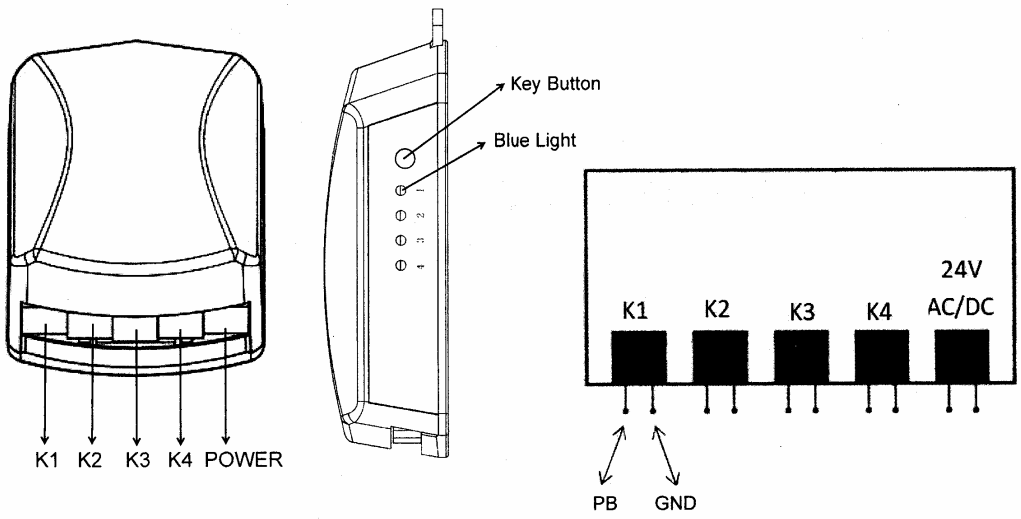
K2's 2 points need to be connected to PB and GND of opener 2.